 


Television Téléviseur Televisor digital a color con pantalla de cristal líquido

Reference Guide Manuel de référence Guía de referencia

K-98XR50 / 98XR50C / 85XR50
K-85XR50C / 75XR50 / 75XR50C
K-65XR50 / 65XR50C / 55XR50
K-55XR50C

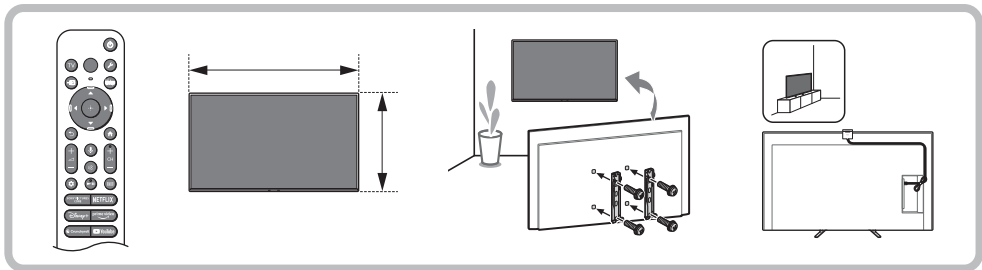

Sony Customer Support

U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. Canada
1.800.222.SONY (7669) 1.877.899.SONY (7669)
Call the telephone number that appears on your warranty card/policy.
Please do not return the product to the store.

Service à la clientèle Sony

Canada :
<https://www.sony.ca/support>
États-Unis :
<https://www.sony.com/tvsupport>
Canada États-Unis
1.877.899.SONY (7669) 1.800.222.SONY (7669)
Appelez le numéro de téléphone qui apparaît sur votre carte/policy de garantie.
Ne retournez pas le produit au magasin.

Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>
Llame al número de teléfono que aparece en su tarjeta/póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.

© 2025 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensions et poids (sans support de table) / Dimensiones y peso (sin soporte de sobremesa)		(mm)/(Inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
		A	B	C	W
K-98XR50 / 98XR50C		2199 / 86 3/8	1255 / 49 1/2	85 / 3 3/8	69.0 / 152.1
		2199 / 86 3/8	1255 / 49 1/2	85 / 3 3/8	69.0 / 152.1
K-85XR50 / 85XR50C		1895 / 74 3/8	1087 / 42 7/8	60 / 2 1/8	46.3 / 102
		1895 / 74 3/8	1087 / 42 7/8	60 / 2 1/8	46.3 / 102
K-75XR50 / 75XR50C		1671 / 65 7/8	960 / 37 7/8	60 / 2 1/8	36.2 / 79.8
		1671 / 65 7/8	960 / 37 7/8	60 / 2 1/8	36.2 / 79.8
K-65XR50 / 65XR50C		1447 / 57	832 / 32 7/8	58 / 2 1/8	24.9 / 54.9
		1447 / 57	832 / 32 7/8	58 / 2 1/8	24.9 / 54.9
K-55XR50 / 55XR50C		1228 / 48 3/8	709 / 28	57 / 2 1/4	17.7 / 39
		1228 / 48 3/8	709 / 28	57 / 2 1/4	17.7 / 39

*1 (Approx. / Environ / Aprox.)

Dimensions and weight (with Table-Top Stand) / Dimensions et poids (avec support de table) / Dimensiones y peso (con soporte de sobremesa)		(mm)/(Inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
		A	B	C	W
K-98XR50 / 98XR50C		2199 / 86 3/8	1325 / 52 1/4	85 / 3 3/8	71.4 / 157.3
		2199 / 86 3/8	1325 / 52 1/4	85 / 3 3/8	71.4 / 157.3
K-85XR50 / 85XR50C		1895 / 74 3/8	1117 / 44	60 / 2 1/8	49.1 / 108.2
		1895 / 74 3/8	1117 / 44	60 / 2 1/8	49.1 / 108.2
K-75XR50 / 75XR50C		1671 / 65 7/8	990 / 39	57 / 2 1/8	38.6 / 85.1
		1671 / 65 7/8	990 / 39	57 / 2 1/8	38.6 / 85.1
K-65XR50 / 65XR50C		1447 / 57	862 / 34	57 / 18 3/4	26.3 / 58
		1447 / 57	862 / 34	57 / 18 3/4	26.3 / 58
K-55XR50 / 55XR50C		1228 / 48 3/8	739 / 29 1/8	50 / 11	18.8 / 41.5
		1228 / 48 3/8	739 / 29 1/8	50 / 11	18.8 / 41.5


*1 (Approx. / Environ / Aprox.)

(mm)/(Inches/pouces/pulgadas)*1		A	B	C	D	E	F
K-98XR50 / 98XR50C		2199 / 86 3/8	1325 / 52 1/4	85 / 3 3/8	1536 / 60 1/2	71.4 / 157.3	71.4 / 157.3
		2199 / 86 3/8	1325 / 52 1/4	85 / 3 3/8	1536 / 60 1/2	71.4 / 157.3	71.4 / 157.3
K-85XR50 / 85XR50C		1895 / 74 3/8	1117 / 44	60 / 2 1/8	1039 / 41	49.1 / 108.2	49.1 / 108.2
		1895 / 74 3/8	1117 / 44	60 / 2 1/8	1039 / 41	49.1 / 108.2	49.1 / 108.2
K-75XR50 / 75XR50C		1671 / 65 7/8	990 / 39	57 / 18 3/4	405 / 16	38.6 / 85.1	38.6 / 85.1
		1671 / 65 7/8	990 / 39	57 / 18 3/4	405 / 16	38.6 / 85.1	38.6 / 85.1
K-65XR50 / 65XR50C		1447 / 57	862 / 34	57 / 18 3/4	405 / 16	26.3 / 58	26.3 / 58
		1447 / 57	862 / 34	57 / 18 3/4	405 / 16	26.3 / 58	26.3 / 58
K-55XR50 / 55XR50C		1228 / 48 3/8	739 / 29 1/8	50 / 11	408 / 16 1/8	18.8 / 41.5	18.8 / 41.5
		1228 / 48 3/8	739 / 29 1/8	50 / 11	408 / 16 1/8	18.8 / 41.5	18.8 / 41.5

The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longueur des vis pour le support de fixation murale varie selon l'épaisseur du support de fixation murale / La longitud del tornillo para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural

SU-WL855 or SU-WL460 only / SU-WL855 or SU-WL460 uniquement / Solo SU-WL855 o SU-WL460		Except SU-WL855 or SU-WL460 / Excepto SU-WL855 o SU-WL460	
K-98XR50 / 98XR50C 11 – 20 (mm)		K-98XR50 / 98XR50C 11 – 20 (mm)	
K-85XR50 / 85XR50C 8 – 10 (mm)		K-85XR50 / 85XR50C / 75XR50 / 75XR50C / 55XR50C 7 – 9 (mm)	
K-75XR50 / 75XR50C 8 – 10 (mm)		K-75XR50 / 75XR50C 8 – 10 (mm)	
K-65XR50 / 65XR50C 8 – 10 (mm)		K-65XR50 / 65XR50C 8 – 10 (mm)	
K-55XR50 / 55XR50C 8 – 10 (mm)		K-55XR50 / 55XR50C 8 – 10 (mm)	

 Optional Camera and Microphone Unit (not supplied) Cable Management / Gestion du câble de la caméra avec microphone en option (non fourni) / Manejo del cable de la unidad de cámara y micrófono opcional (no suministrado)

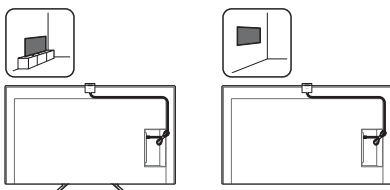

Compatible Wall-Mount Bracket Information

Use the following Sony Wall-Mount Bracket with your TV model.

Sony TV Model No.	
K-65XR50 / 65XR50C / 55XR50 / 55XR50C	K-98XR50 / 98XR50C
Sony Wall-Mount Bracket Model No.	SU-WL855** SU-WL460**

Use with other Wall-Mount Brackets** may cause instability and could result in property damage or injury.

*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".

To Customers
Sufficient expertise is required for TV installation. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to a wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

1 (Power) TV: Display TV channel list or switch to input.
2 (Quick Settings): Display Quick Settings.
3 (Input): Display the input source options, etc.
4 (Menu/Control menu): Display the Control menu.
5 (Back)
6 (Home)
7 (Google Assistant / Microphone): Use Google Assistant**.

8 (Volume)
9 (Mute)*
10 (Channel)
11 (Dashboard): Display Dashboard.
12 (Guide): Display the digital program guide of TV or Cable/satellite box**.

13 (App buttons)
14 (Remote control only). To see the model name of the remote control, open the remote control cover and see the label on the remote control.
15 (The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.)
16 (The remote control is rechargeable. The LED indicator will show charging status (red). Use the supplied USB cable to charge the remote control using your own USB AC adapter.
17 (The buzzer will emit a sound either when you use the remote control finder function or when you press the power button on the remote control when the battery is low. Refer to the online Help Guide for details.
18 (Only for limited region/country/model/language.
19 (Google Assistant requires an Internet connection.
20 (Accessibility shortcut is available by pressing and holding [Mute]).
21 (Cable/Satellite box setup) setting is required.

22 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
23 (Read the supplied safety documentation for additional safety information.

24 (Important notice)
25 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
26 (Read the supplied safety documentation for additional safety information.

27 (Important notice)
28 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
29 (Read the supplied safety documentation for additional safety information.

30 (Important notice)
31 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
32 (Read the supplied safety documentation for additional safety information.

33 (Important notice)
34 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
35 (Read the supplied safety documentation for additional safety information.

36 (Important notice)
37 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
38 (Read the supplied safety documentation for additional safety information.

39 (Important notice)
40 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
41 (Read the supplied safety documentation for additional safety information.

42 (Important notice)
43 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
44 (Read the supplied safety documentation for additional safety information.

45 (Important notice)
46 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
47 (Read the supplied safety documentation for additional safety information.

48 (Important notice)
49 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
50 (Read the supplied safety documentation for additional safety information.

51 (Important notice)
52 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
53 (Read the supplied safety documentation for additional safety information.

Compatible Wall-Mount Bracket Information

Use the following Sony Wall-Mount Bracket with your TV model.

Sony TV Model No.	
K-65XR50 / 65XR50C / 55XR50 / 55XR50C	K-98XR50 / 98XR50C
Sony Wall-Mount Bracket Model No.	SU-WL855** SU-WL460**

Use with other Wall-Mount Brackets** may cause instability and could result in property damage or injury.

*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".

To Customers
Sufficient expertise is required for TV installation. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to a wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

1 (Power) TV: Display TV channel list or switch to input.
2 (Quick Settings): Display Quick Settings.
3 (Input): Display the input source options, etc.
4 (Menu/Control menu): Display the Control menu.
5 (Back)
6 (Home)
7 (Google Assistant / Microphone): Use Google Assistant**.

8 (Volume)
9 (Mute)*
10 (Channel)
11 (Dashboard): Display Dashboard.
12 (Guide): Display the digital program guide of TV or Cable/satellite box**.

13 (App buttons)
14 (Remote control only). To see the model name of the remote control, open the remote control cover and see the label on the remote control.
15 (The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.)
16 (The remote control is rechargeable. The LED indicator will show charging status (red). Use the supplied USB cable to charge the remote control using your own USB AC adapter.
17 (The buzzer will emit a sound either when you use the remote control finder function or when you press the power button on the remote control when the battery is low. Refer to the online Help Guide for details.
18 (Only for limited region/country/model/language.
19 (Google Assistant requires an Internet connection.
20 (Accessibility shortcut is available by pressing and holding [Mute]).
21 (Cable/Satellite box setup) setting is required.

22 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
23 (Read the supplied safety documentation for additional safety information.

24 (Important notice)
25 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
26 (Read the supplied safety documentation for additional safety information.

27 (Important notice)
28 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
29 (Read the supplied safety documentation for additional safety information.

28 (Important notice)
29 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
30 (Read the supplied safety documentation for additional safety information.

29 (Important notice)
30 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
31 (Read the supplied safety documentation for additional safety information.

30 (Important notice)
31 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
32 (Read the supplied safety documentation for additional safety information.

31 (Important notice)
32 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
33 (Read the supplied safety documentation for additional safety information.

 
32 (Important notice)
33 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
34 (Read the supplied safety documentation for additional safety information.

33 (Important notice)
34 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
35 (Read the supplied safety documentation for additional safety information.














34 (Important notice)
35 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
36 (Read the supplied safety documentation for additional safety information.

35 (Important notice)
36 (Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
37 (Read the supplied safety documentation for additional safety information.

K-98XR50 / 98XR50C

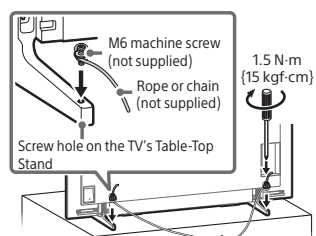


             K-85XR50 / 85XR50C / 75XR50 / 75XR50C / 55XR50 / 55XR50C

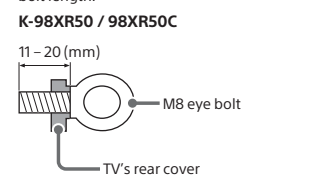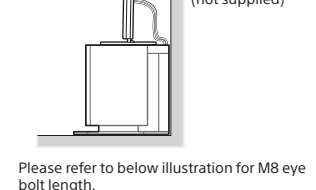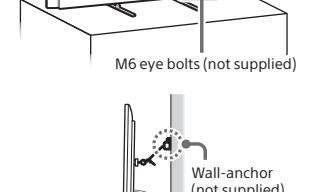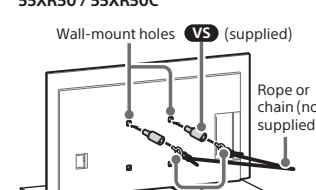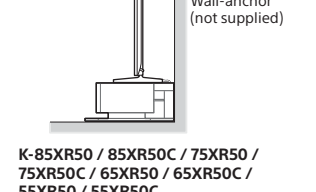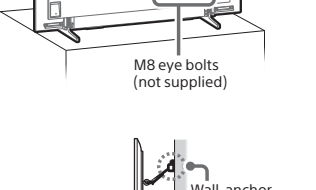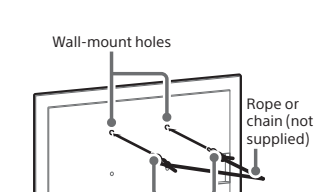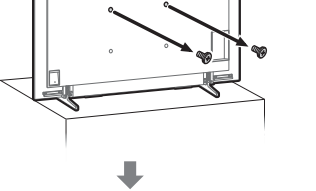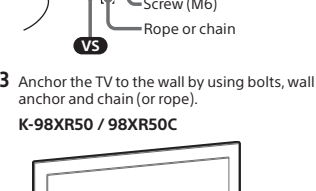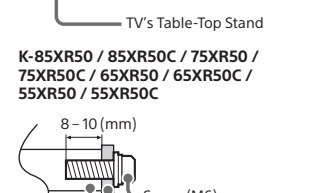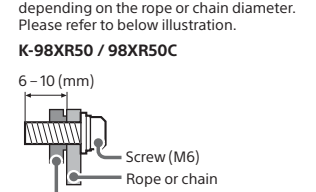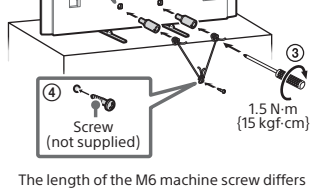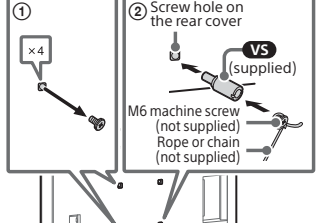

Please refer to below illustration for M6 eye bolt length.

 K-98XR50 / 98XR50C / 75XR50 / 75XR50C / 55XR50 / 55XR50C

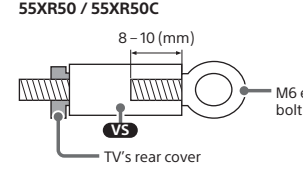

K-85XR50 / 85XR50C / 75XR50 / 75XR50C / 55XR50 / 55XR50C

